



Battery Changer Conventional (FSB)

To use the attachment, ensure that the truck seat, battery cover etc. are tilted out of the way and that there are no obstructions to prevent the battery being lifted. Raise the forks until the attachment is above battery level, allowing clearance to fit the hooks. Drive the truck forwards so that the attachment is between the battery and the overhead guard and positioned centrally along the battery length.


When the attachment is in place, fit the hooks one through each hole in the outer steel casing. In the event of only one hole being available in each end of the casing fit 2 hooks through each end, if hole diameters permit. Failing this ensures that the free legs are back-hooked out of the way. Position hooks to face outwards from the battery.

CONTACT Conventional battery Beam is designed to remove and replace fork truck batteries simply and without damage. Slide and clamp onto truck forks. Made to suit individual batteries




Model Ref.	Capacity	A (Hole Ctrs)	B (Battery Width)	C (Battery Length)	H (Hole Dia)	E (Fork Spread)
FSB-1	1000Kg					307mm
FSB-2	2000Kg					307mm

Max Fork Size 140 x 50mm

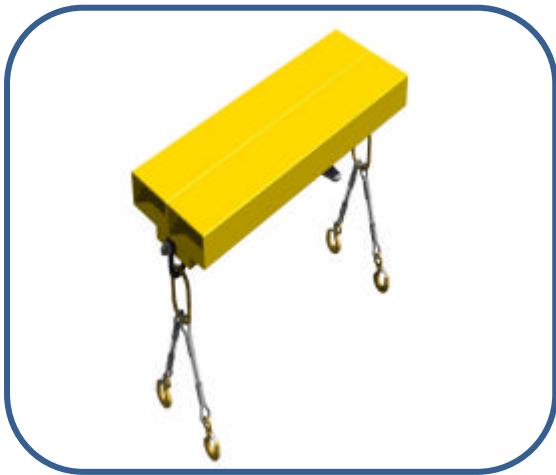

Ordering Information:

- ✓ Truck Capacity
- ✓ Fork Width & Thickness
- ✓ Battery Weight
- ✓ Dimensions A, B, C and H

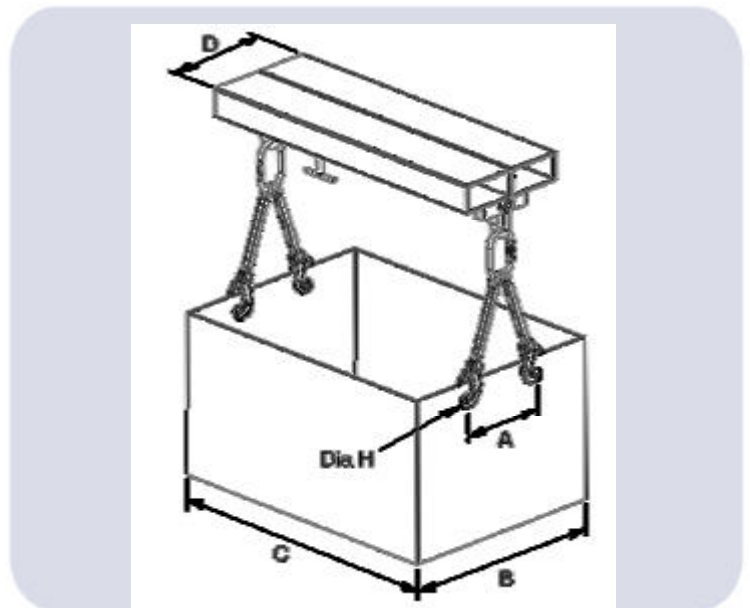

For further information contact us on: **01686 611 200**

Or visit us at: www.forklift-attachments.co.uk