

# Product Guide Sheet


## Carrimax Jib

Our best selling carrimax Jib, fits directly to the truck carriage. Simply remove the rear hangers/blocks from the attachment backplate via the nuts and bolts. Then simply drive the truck slowly forwards with the top rail below the attachment top hanger until the carriage contacts the attachment backplate, then simply raise the carriage if necessary to achieve a tight fit, then simply re-fit the rear hangers, and the jib is fully fitted. Stands are available to help aid storage and fitment of jib to truck.



Our Carrimax Jib is a standard jib for mounting direct onto the truck carriage. Supplied c/w hook and shackle. Profiled beam allows access in confined spaces.

Model Ref.	Truck Capacity	Carriage Cls	Hook to Underside of Carriage	Weight	C of G
HCJ 600-5.0	5500kgs	4	898mm	188kgs	495mm
HCJ 600-5.5	6000kgs	4	1185mm	365kgs	386mm
HCJ 600-6.0	6500kgs	4	1185mm	365kgs	386mm
HCJ 600-6.5	7000kgs	4	1185mm	405kgs	345mm
HCJ 600-7.4	8000kgs	4	1185mm	409kgs	342mm

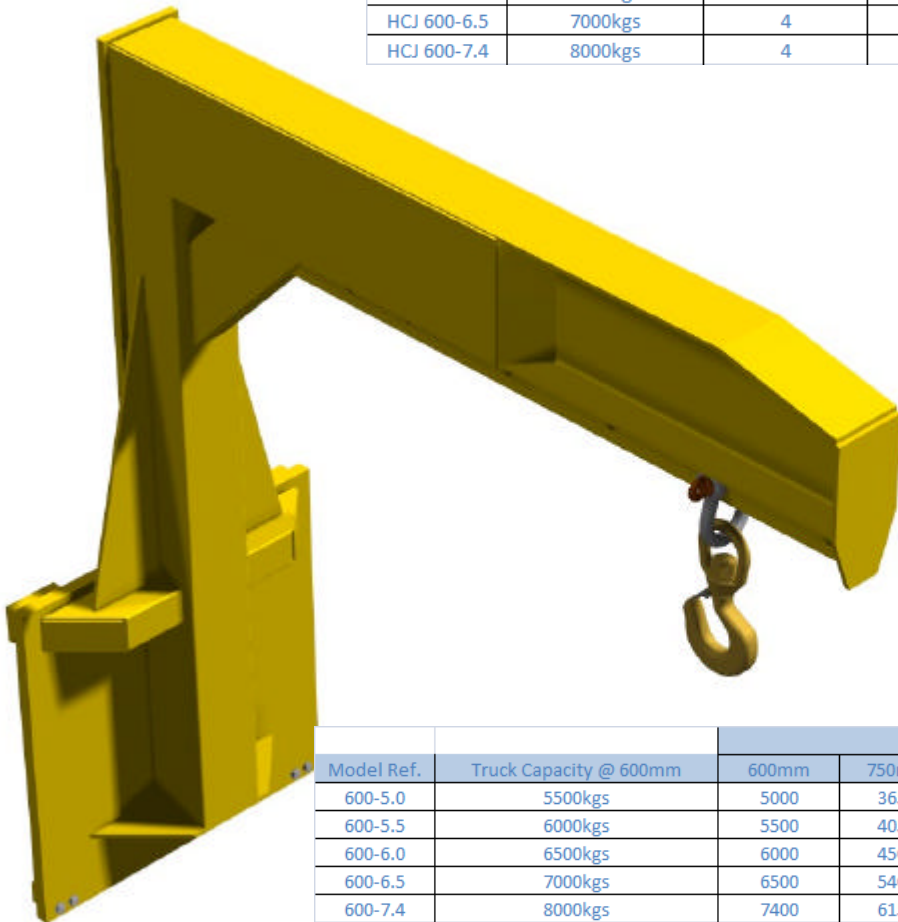

**Ordering Information**  
 Product Handled?  
 Truck Capacity?  
 Type of Working Environment?  
 Load Details?

Model Ref.	Truck Capacity @ 600mm	Capacity (kgs) @ Load Ctr (mm)					
		600mm	750mm	1000mm	1250mm	1500mm	1750mm
600-5.0	5500kgs	5000	3650	2950	2500	2200	1850
600-5.5	6000kgs	5500	4050	3250	2750	2400	2050
600-6.0	6500kgs	6000	4500	3600	3000	2600	2300
600-6.5	7000kgs	6500	5400	4200	3300	2900	2400
600-7.4	8000kgs	7400	6150	4800	3750	3315	2750