

HOW TO FIT GENIEGRIPS® STIK-IT PADS



STEP 1:

Wash & Prepare Tynes

Wash tynes with alcohol wipe or equivalent solution. The surface to which the tape is applied must be clean, dry, free of grease, oil or other contaminants.



STEP 2:

Measure tyne length and width


Measure the tyne length and width. The Pads measure at 100mm (4") wide and 1150mm (45") long.



STEP 3:

Trimming the Pad

If tyne is less than 1150mm (45") the Pad will need to be trimmed. The Pad can be cut using scissors or utility knife. Cut length to tyne measurement in Step 2.

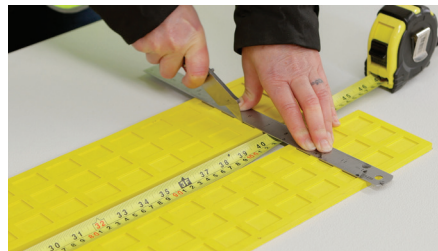

STEP 4:

Adding a Pad for length

If tyne is longer than 1150mm (45") in Step 2. Butt up the thick ends of the Pad and trim second Pad as required.



STEP 5:

Adding a Pad for width

The Pads can be used side by side if your tyne measures 200mm (8") or wider



STEP 6:

Sticking Pad onto Tyne

Place Pad onto tyne, remove the tape from the tip of the Pad and slowly peel towards the forklift.



STEP 7:

Guide Pad onto Tyne

As the tape is being peeled from the underside of Pad, use your hand to guide the Pad onto the tyne.



STEP 8:

Finish install

Press down on the Pad to ensure the Pad is stuck firmly to the tyne.



STEP 9:

Before Use

While the Pads are ready to use immediately, ideally allow an hour for maximum adhesion before use.

