


HOW TO FIT GENIEGRIPS® CUSHIONS

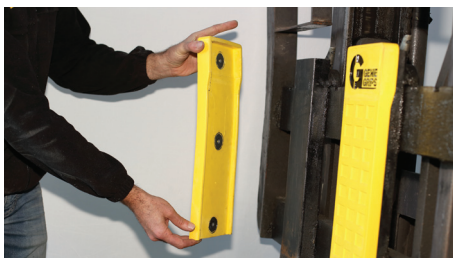

STEP 1:

Locate Magnets

Ensure Cushions are correct way up, with magnets facing forktyne shaft.

STEP 2:


Position Cushion

Position the Cushions over the forktyne so it meets the top of shaft.

STEP 3:

Push Firmly

Push Cushions firmly against the forktyne shaft to ensure strong contact is made with magnets.

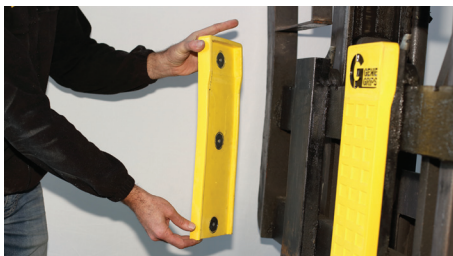

STEP 4:

To Remove

Reverse steps 1-3 to remove GenieGrips® Cushions.

STEP 5:

Storage

Store Cushions away neatly on forklift to ensure GenieGrips® are easily accessible at all times.

WARNING Magnets may interfere with the function of cardiac pacemakers and implantable cardioverter-defibrillators (ICDs). Do not place the GenieGrips® Cushions near your chest if you have a cardiac pacemaker or ICD.



ALWAYS:

- Ensure forklift truck is only operated by licensed/trained personnel and in accordance with manufacturer's safe operating procedures.

HELPFUL HINT:

"Ensure GenieGrips® Cushions magnets are kept clean and free of contamination (eg grease, oil, paint, etc)"